

Firefix® Double Clip



The Firefix double clip is an LUL approved clip for rapid installation of fire alarm and emergency lighting cables.

Features and Benefits

- LUL APR Product ID 1960.
- Nail fixed fire resistant clip.
- The Firefix™ system is fast easy and meets the cable support requirements of British standards: BS5839-1: 2002, BS5266-1:2011 and BS5839-8: 2006.
- Designed to be used with the Spit Pulsa™ gas nailing technology for rapid installation.
- Made from corrosion resistant Stainless Steel which is coated with an intumescent LSOH coating in either white or red to match the cable.
- Should be installed in accordance with BS7671 / IEE wiring regulations, or other appropriate code.
- Can be fixed to steel, block work, composite steel decking, brick or concrete.
- The fixing of the clip and installation of the cable takes just 10 seconds.


Kit Selection

Kit contents : Clips, ITW nails and gas cartridge, pin guide adaptors



| Clip Selection | | | | Clip Details | | | | | | | |
|----------------|--------|----------------|-----|----------------------|-------|--------|-----------|---------|---------------|-----------------|--|
| Standard | Colour | Cable Diameter | | Installed Dimensions | | | Nail Size | Kit Qty | Weight Ea (g) | Kit Weight (Kg) | |
| | | A (mm) | | (mm) | | | | | | | |
| | | Min | Max | Height | Width | Length | | | | | |
| FPNF02R | Red | 7.7 | 8.5 | 15 | 21.6 | 25.4 | 17mm | 500 | 8.9 | 4.5 | |
| FPNF02W | White | 7.7 | 8.5 | 15 | 21.6 | 25.4 | 17mm | 500 | 8.9 | 4.5 | |
| FPNF02R15 | Red | 7.7 | 8.5 | 15 | 21.6 | 25.4 | 15mm | 500 | 8.7 | 4.45 | |
| FPNF02W15 | White | 7.7 | 8.5 | 15 | 21.6 | 25.4 | 15mm | 500 | 8.7 | 4.45 | |
| FPNF04R | Red | 8.5 | 9.0 | 15 | 21.6 | 25.4 | 17mm | 500 | 8.9 | 4.5 | |
| FPNF04W | White | 8.5 | 9.0 | 15 | 21.6 | 25.4 | 17mm | 500 | 8.9 | 4.5 | |
| FPNF04R15 | Red | 8.5 | 9.0 | 15 | 21.6 | 25.4 | 15mm | 500 | 8.7 | 4.45 | |
| FPNF04W15 | White | 8.5 | 9.0 | 15 | 21.6 | 25.4 | 15mm | 500 | 8.7 | 4.45 | |

Nailing tool sold separately. Part No: PULSA800E

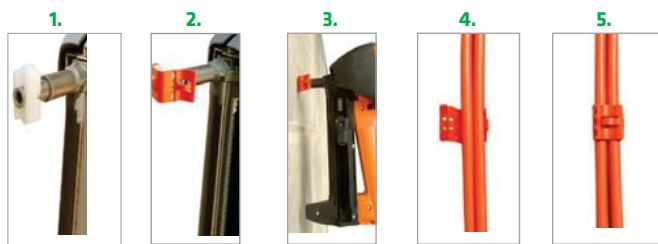

Installation

1. Attach adaptor to Pulsa™ tool.
2. Position the FIREFIX™ clip on to the adaptor.
3. Ensure the substrate is clear before pushing the Spit Pulsa™ tool against the substrate, and nailing the clip into position.
4. Place the cable into the clip.
5. Close clip.